

PANEL WIDTH CHART**(in inches)**Dimensions shown are out-to-out of bearing bars
(Add 1/4" for extended cross rods)

No. of Bars	1/8 Bar	3/16 Bar	No. of Bars	1/8 Bar	3/16 Bar
2	13/16	7/8	28	18-11/16	18-3/4
3	1-1/2	1-9/16	29	19-3/8	19-7/16
4	2-3/16	2-1/4	30	20-1/16	20-1/8
5	2-7/8	2-15/16	31	20-3/4	20-13/16
6	3-9/16	3-5/8	32	21-7/16	21-1/2
7	4-1/4	4-5/16	33	22-1/8	22-3/16
8	4-15/16	5	34	22-13/16	22-7/8
9	5-5/8	5-11/16	35	23-1/2	23-9/16
10	6-5/16	6-3/8	36	24-3/16	24-1/4
11	7	7-1/16	37	24-7/8	24-15/16
12	7-11/16	7-3/4	38	25-9/16	25-5/8
13	8-3/8	8-7/16	39	26-1/4	26-5/16
14	9-1/16	9-1/8	40	26-15/16	27
15	9-3/4	9-13/16	41	27-5/8	27-11/16
16	10-7/16	10-1/2	42	28-5/16	28-3/8
17	11-1/8	11-3/16	43	29	29-1/16
18	11-13/16	11-7/8	44	29-11/16	29-3/4
19	12-1/2	12-9/16	45	30-3/8	30-7/16
20	13-3/16	13-1/4	46	31-1/16	31-1/8
21	13-7/8	13-15/16	47	31-3/4	31-13/16
22	14-9/16	14-5/8	48	32-7/16	32-1/2
23	15-1/4	15-5/16	49	33-1/8	33-3/16
24	15-15/16	16	50	33-13/16	33-7/8
25	16-5/8	16-11/16	51	34-1/2	34-9/16
26	17-5/16	17-3/8	52	35-3/16	35-1/4
27	18	18-1/16	53	35-7/8	35-15/16