

# PANEL WIDTH CHART (in inches)

Dimensions shown are out-to-out of bearing bars  
(Add 1/4" for extended cross rods)

No. of Bars	1/4 Bar	5/16 Bar	3/8 Bar
2	1-7/16	1-1/2	1-9/16
3	2-5/8	2-11/16	2-3/4
4	3-13/16	3-7/8	3-15/16
5	5	5-1/16	5-1/8
6	6-3/16	6-1/4	6-5/16
7	7-3/8	7-7/16	7-1/2
8	8-9/16	8-5/8	8-11/16
9	9-3/4	9-13/16	9-7/8
10	10-15/16	11	11-1/16
11	12-1/8	12-3/16	12-1/4
12	13-5/16	13-3/8	13-7/16
13	14-1/2	14-9/16	14-5/8
14	15-11/16	15-3/4	15-13/16
15	16-7/8	16-15/16	17
16	18-1/16	18-1/8	18-3/16
17	19-1/4	19-5/16	19-3/8
18	20-7/16	20-1/2	20-9/16
19	21-5/8	21-11/16	21-3/4
20	22-13/16	22-7/8	22-15/16
21	24	24-1/16	24-1/8
22	25-3/16	25-1/4	25-5/16
23	26-3/8	26-7/16	26-1/2
24	27-9/16	27-5/8	27-11/16
25	28-3/4	28-13/16	28-7/8
26	29-15/16	30	30-1/16
27	31-1/8	31-3/16	31-1/4
28	32-5/16	32-3/8	32-7/16
29	33-1/2	33-9/16	33-5/8
30	34-11/16	34-3/4	34-13/16
31	35-7/8	35-15/16	36