

PANEL WIDTH CHART

(in inches)

Dimensions shown are out-to-out of bearing bars (Add 1/4" for extended cross rods)

No. of Bars	1/8 Bar	3/16 Bar
2	1-5/16	1-3/8
3	2-1/2	2-9/16
4	3-11/16	3-3/4
5	4-7/8	4-15/16
6	6-1/16	6-1/8
7	7-1/4	7-5/16
8	8-7/16	8-1/2
9	9-5/8	9-11/16
10	10-13/16	10-7/8
11	12	12-1/16
12	13-3/16	13-1/4
13	14-3/8	14-7/16
14	15-9/16	15-5/8
15	16-3/4	16-13/16
16	17-15/16	18
17	19-1/8	19-3/16
18	20-5/16	20-3/8
19	21-1/2	21-9/16
20	22-11/16	22-3/4
21	23-7/8	23-15/16
22	25-1/16	25-1/8
23	26-1/4	26-5/16
24	27-7/16	27-1/2
25	28-5/8	28-11/16
26	29-13/16	29-7/8
27	31	31-1/16
28	32-3/16	32-1/4
29	33-3/8	33-7/16
30	34-9/16	34-5/8
31	35-3/4	35-13/16